

U.S.SAWS™

PIPE CLAMP PIN MOUNTING INSTRUCTIONS



MOUNT PIN ON ACH-GB16

- REMOVE REAR BAR TENSIONING NUT.
- INSTALL MOUNTING PIN ON LOCATION.

The inner thread of the pin will take the place of the bar tensioning nut. In certain applications (larger than 10" pipe) the mounting pin may need to be re-located to the front hole for greater saw clearance. Ensure the chain is adjusted according to operator's manuals.




MOUNT PIN TO ICS695XL 16" TIGER TOOTH CHAIN SAW

- REMOVE OUTER CHAIN COVER FROM SAW.
- REMOVE THREE SCREWS ON THE CHAIN TENSIONER COVER.



- REMOVE COVER AND LOCATE SNAP RING ATTACHED TO CHAIN TENSIONING NUT.
- USE A SCREWDRIVER OR SIMILAR TOOL TO PRY SNAP RING FROM NUT.

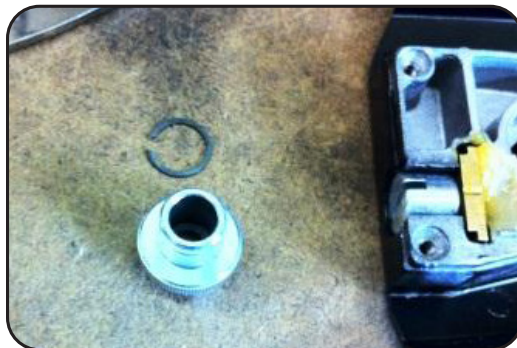

- ONCE CLIP IS REMOVED THE RETAINING BOLT WILL SLIP OUT OF THE COVER.
- THE PIPE CLAMP RECEIVER PIN WILL FIT OVER THE TENSIONING COVER AND STUD.
- TIGHTEN FIRMLY AND VERIFY SAWS CHAIN TENSION IS SET ACCORDING TO THE OPERATOR'S MANUAL.

*Read and understand instruction provided with a saw/ pipe clamp instruction before using this device.
Use caution not to drop saw or strike mounting pin as damage to the chain tensioning mechanism can occur.*

